


## User Manual – Wall-Hung Toilet Bowl Cronus Pro

---

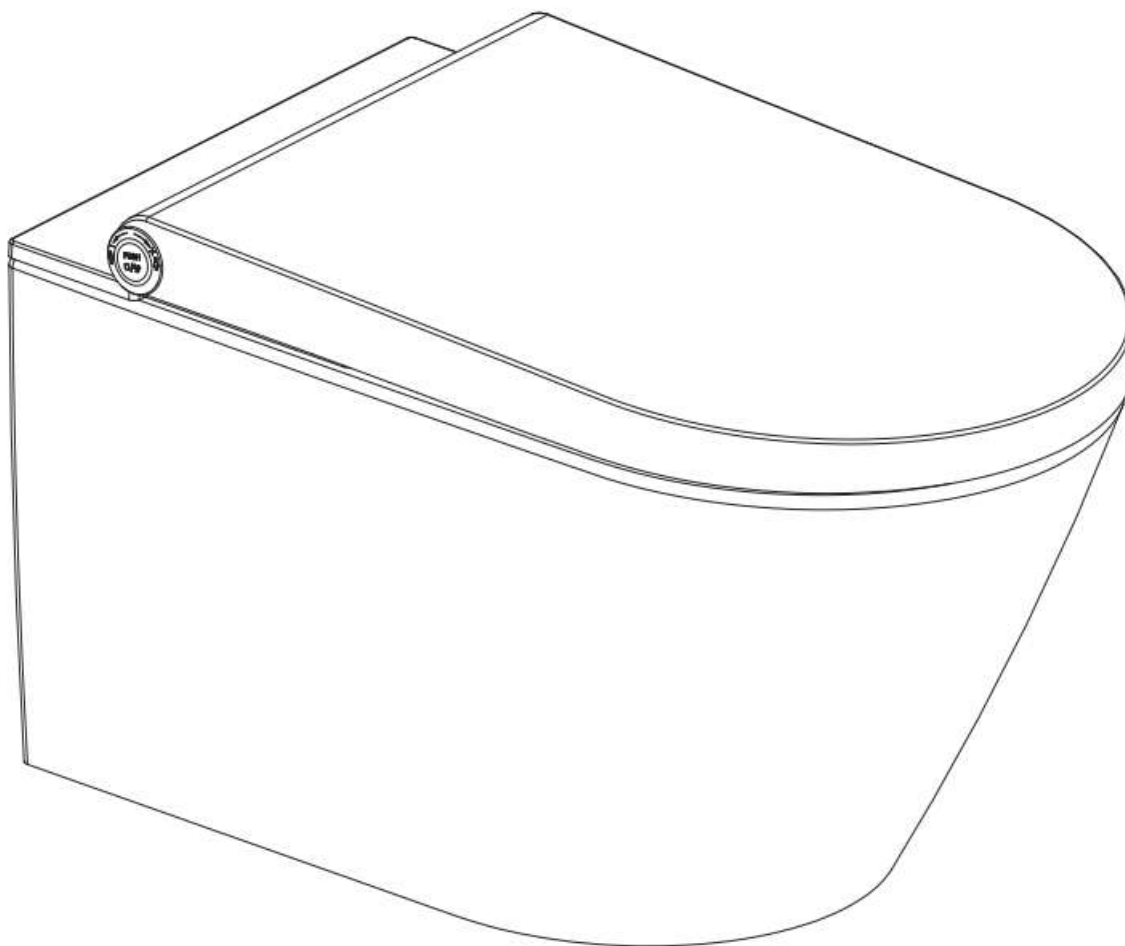

— cerano —

# Safety Precautions

---

## Explanation of Symbols



**Danger** – Indicates a potentially hazardous situation that may cause serious injury or death.



**Notice** – Indicates important information that is not related to personal injury but may affect the proper use or functioning of the product.



**Forbid** – Indicates activities that are forbidden.



**MUST BE ABIDED**

**Must be abided** – Indicates activities that must be abided by the rules.




Supplier is not responsible for any damages resulting from failure to comply with the following regulations.

1. This device is a Class I electrical appliance and must be properly connected to the grounding system.
  2. If the power cable is damaged, it must be replaced by the manufacturer, its service representative, or another qualified person to avoid danger.
  3. This device is an electrical appliance. It must not be installed in places where it may be exposed to splashing water or high temperatures. Proper ventilation must be ensured in the bathroom using a fan or ventilation opening.
  4. This device may be used by children under 3 years old only under the constant supervision of an adult in their immediate vicinity. Children aged 3 and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge may use the device if they have been properly instructed and supervised. Children must not play with the device. Cleaning and maintenance must not be performed by children without supervision.
  5. The device is permanently connected to the water supply pipe. Please do not disassemble the water connection except during installation and maintenance.
  6. Portable Residual Current Devices (PRCD) are optional. The PRCD must be securely fixed.
-



## FORBID

1. Do not insert or unplug the power plug with wet hands. Otherwise, there is a risk of electric shock.
2. Do not damage the power cable or plug. Otherwise, there is a risk of electric shock, short circuit, and fire.
3. Do not use a loose socket. Otherwise, there is a risk of electric shock and fire.
4. The power supply must comply with regulations. Otherwise, there is a risk of product damage and fire.
5. Do not disassemble, repair, or reassemble the product. Otherwise, there is a risk of electric shock and fire.
6. Do not expose the device to open flames or cigarettes – risk of fire.
7. Make sure that water, cleaning agents, or urine do not get on the product or plug. Otherwise, there is a risk of electric shock, product damage, and fire.
8. Do not turn the product upside down. It may cause damage.
9. Do not bend or deform the supply hose. It could cause water leakage.
10. Use only new hoses supplied with the device. Do not reuse old hoses.

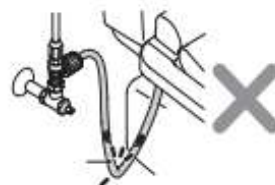

# Technical Specifications


Model		Cronus Pro
Wash	Rear wash	●
	Female wash	●
	Massage	●
	Adjustable water temperatur	OFF/5 steps (default 3rd)
	Adjustable flow rate	5 steps (default 3rd)
	Adjustable spray position	5 steps (default 5th)
Warm air	Air drying	●
	Adjustable air rate	5 steps (default 3rd)
	Adjustable dryer temperatur	OFF/5 steps (default 3rd)
Heated seat	Heated seat	-
	Adjustable seat temperatur	-
Hygiene	Deodoriser	●
	Nozzle automatic cleaning	●
	Nozzle manual cleaning	●
	Descaling	-
	User mode	2 users
	Remote control	D81-01
	Night light	●
	Breathing lamp	●
	Soft closing seat and cover	-
	Body knob	●
	Rimless toilet	●
	Installation of the toilet	Wall-hung
	Water supply connector	G 3/8
	Rated voltage	AC220-240 V, 50/60 HZ
	Power	1170 W
	Length of power cord	1.8 m
	Water supply pressure	0.07-0.75 MPa (0.7-7.5Bar)
	Water supply temperature	4-35°C
	Ambient temperature	4-40°C
	Protection degree	IPX4
Wash device	Flow rate	350-650 mL/min
	Water temperature	31-39 °C
	Wash cycle time	3 minutes
	Heating mode	Tank
	Heater power	120W
	Safety device	Thermal cutoff fuses/Liquid level switch/Thermostat
	Backflow prevention	Air gab of AB type
Dry device	Speed of air	≥ 4m/S
	Dryer power	250 W
	Dry cycle time	3 Minutes
	Warm air temperature	35-50°C
	Safety device	Thermal cutoff fuses/Thermostat
Deodorization	Deodorization mode	Diatom
	Deodorization cycle time	15 minutes
Heated seat	Heated power	-
	Seat temperature	-
	Safety device	-
Remote control	Frequency range	2460 MHz
	Maximum RF output power	-10 dBm
	Type of batteries	1.5V LR03 AAA
	Number of batteries	Two pieces
	Other safety device	Residual current device
	Net weight	35 kg
	Dimension	593*384*388 mm

Technical upgrade will be edited into the new version instruction without additional notice.  
Please follow the real if it is different from the nominal in shape, color and accessories.



# Overview

---

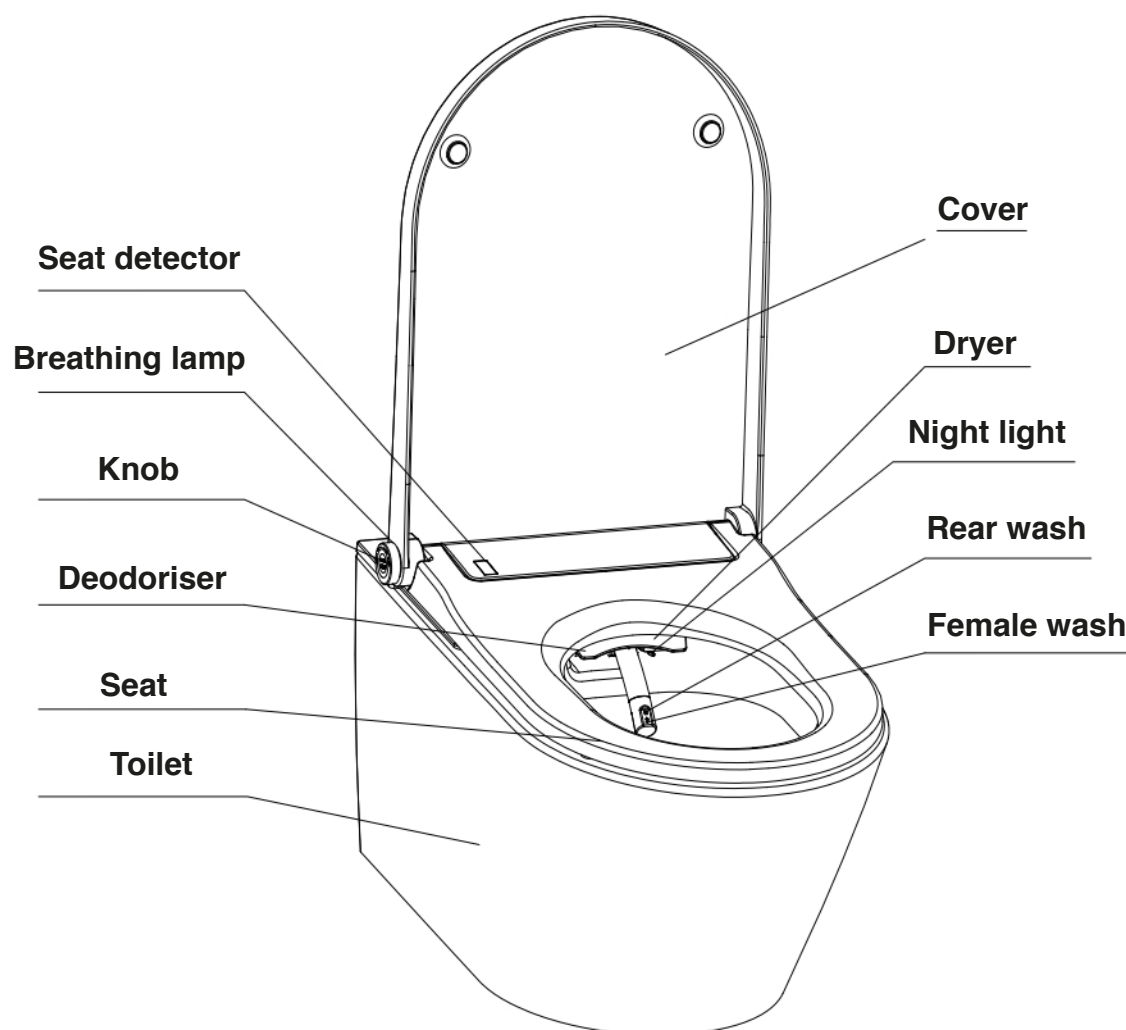


The pictures of this instruction is for reference only. Please subject to the actual product.

---

# Remote control

---

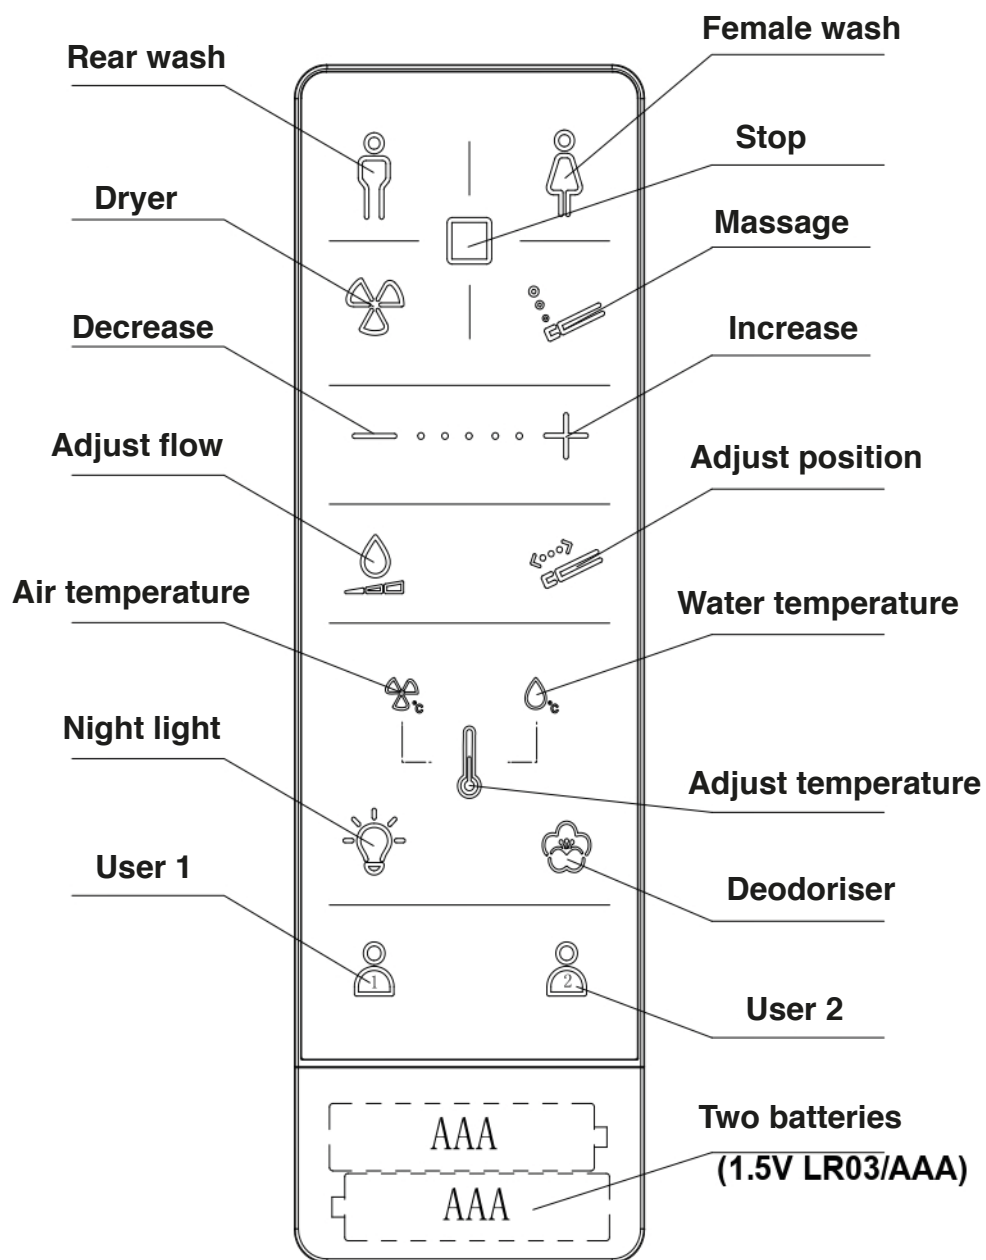

1. Before using, the remoter requires 2 batteries (type 1,5 V LR3/AA).
2. The followed remote-control operation is only for the model with the remote control.
3. Versions of software: V1.0  
(The software updates will not be notified. Please follow the real remote control.)


---

## Rear Wash / Female Wash

Be seated.

Press the "Wash" button on the remote control – the wash will start.


You can stop the wash at any time by pressing the "Stop" button.

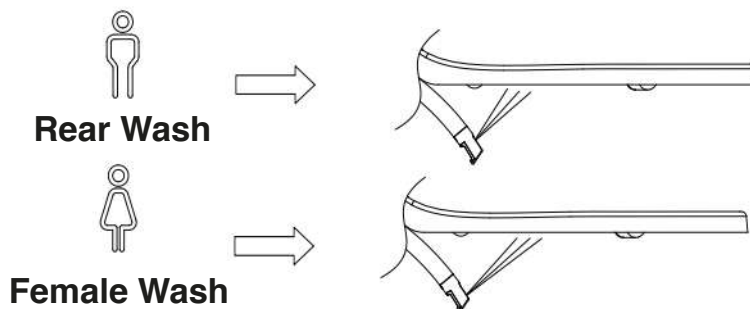

Alternatively, you can control the wash by turning the control knob. Turning clockwise activates the female wash, and turning counterclockwise activates the rear wash.

The wash will automatically stop after 3 minutes and switch to drying mode.

You can stop the wash earlier at any time by pressing the "Stop" button.

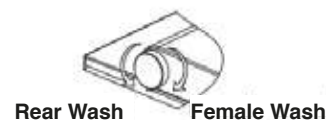


Note: During the rear or female wash, the wash will run for approximately 10 seconds in a fixed position, then about 18 seconds with the moving nozzle, and finally, the nozzle will return to the fixed position until the cycle ends.

## Drying Mode

 Be seated.

Press the "Dry" button on the remote control – drying will begin.

Drying will automatically stop after 3 minutes.




Alternatively,

Be seated.

If neither the rear nor the female wash is currently running, press the control knob – drying will start.

 Drying will automatically stop after 3 minutes.



All of the above controls apply only to models with all functions. If the model you purchased does not include any of the functions, please disregard the corresponding instructions.



---

## Massage Mode

During the rear or female wash, press the "Massage" button on the remote control repeatedly until you select the desired showering mode:



**Oscillating mode:** One indicator light is on



**Pulsating mode:** Two indicator lights are on

 


**Oscillating + pulsating mode:** Three indicator lights are on




## Stop mode

During the rear wash, female wash, or drying, press the "Stop" button on the remote control – the wash or drying will stop.



 Alternatively, press the control knob – the wash or drying will also stop.



## Water flow adjustment

During the rear wash or female wash, press the "Adjust Flow" button on the remote control, then press the "Decrease" or "Increase" button to adjust the water flow.




Alternatively, you can adjust the flow by turning the control knob – turning clockwise will increase the flow, and turning counterclockwise will decrease it.



## Nozzle position adjustment

(Default setting: Position 5)

During the rear wash or female wash, press the "Adjust Position" button on the remote control, then press the "Decrease" (Back) or "Increase" (Forward) button to move the nozzle backward or forward.

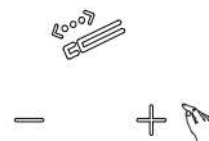


---

## Temperature Adjustment

### Water Temperature Setting

During the rear wash or female wash, press the "Adjust Temperature" button on the remote control repeatedly until the water temperature icon lights up. Then press the "Increase" or "Decrease" button to adjust the water temperature.

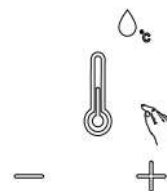


Alternatively, press and hold the control knob and turn it – the water temperature will increase when turning clockwise and decrease when turning counterclockwise.




### Air Temperature Adjustment

During drying, press the "Adjust Temperature" button on the remote control repeatedly until the air temperature icon lights up. Then press the "Increase" or "Decrease" button to adjust the air temperature.

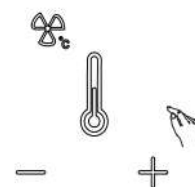

Alternatively, press and hold the control knob and turn it – the air temperature will increase when turning clockwise and decrease when turning counterclockwise.

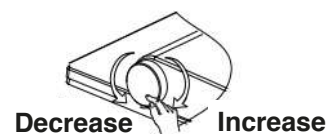

### Lighting Adjustment

The night light is set to always on by default.

By pressing the "Night Light" button on the remote control repeatedly, you can select different modes.

**Off mode:** One indicator light is on.

**Always on mode:** Two indicator lights are on.

**Smart mode:** Three indicator lights are on.



Alternatively, open the lid and seat without sitting down, and turn the control knob counterclockwise. The night light will switch between different modes: off, always on, and smart mode.

**NOTE:** The "Smart" mode means the night light will automatically turn on in the dark and turn off when there is sufficient ambient light.

---

---

## Deodorization Setting

The default deodorization setting is smart mode. Deodorization will automatically turn on when seated and turn off one minute after leaving the seat. If no washing or drying occurs while seated, deodorization will automatically turn off after 15 minutes.

By pressing the "Deodorization" button on the remote control repeatedly, you can manually turn deodorization on or off.



**Off mode:** One indicator light is on.

**Smart mode:** Two indicator lights are on.



Alternatively, open the lid and sit down without starting the washing or drying. Then, press and hold the control knob and turn it clockwise or counterclockwise – this will turn the deodorization on or off.

## Decorative Light Setting

By default, the decorative light is always on. Open the lid and sit down without starting the washing or drying. Then, press and hold the control knob for 6 seconds – the decorative light will turn off. It will turn back on after pressing and holding the knob for another 6 seconds.

## User Settings

### Saving User Settings

After adjusting the water flow, temperature, and nozzle position, press and hold the "User 1" or "User 2" button on the remote control for more than 3 seconds – the settings will be saved to the User 1 or User 2 profile.




### Loading User Settings

Before starting the washing or drying, press the "User 1" or "User 2" button on the remote control. Then start the washing or drying – the water flow, water temperature, nozzle position, and air temperature will match the previously saved settings.



### Standby Mode Setting

In idle mode (when no one is seated), press and hold the control knob for more than 6 seconds – the device will enter standby mode. To restart, press and hold the knob for more than 6 seconds again.

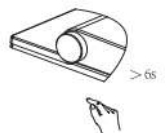

### Sound Setting

The sound is enabled by default – the bidet will beep after receiving a command or signal.

Lift the lid and seat. Then press and hold the control knob and turn it. Turning clockwise will turn the sound on, and turning counterclockwise will turn it off.


# Maintenance and Cleaning

---

## General Maintenance and Cleaning Recommendations

Maintenance Interval	Maintenance Activity
Daily	Wipe off water droplets with a soft, non-abrasive cloth to prevent the formation of water scale stains.
Weekly	Clean all surfaces and corners. If necessary, clean the washing nozzle – refer to the "Nozzle Cleaning" section.
Monthly	Clean the ceramic toilet using a mildly acidic cleaning agent.
Once every six months	If necessary, replace the filter.

## Cleaning Agents and Tools

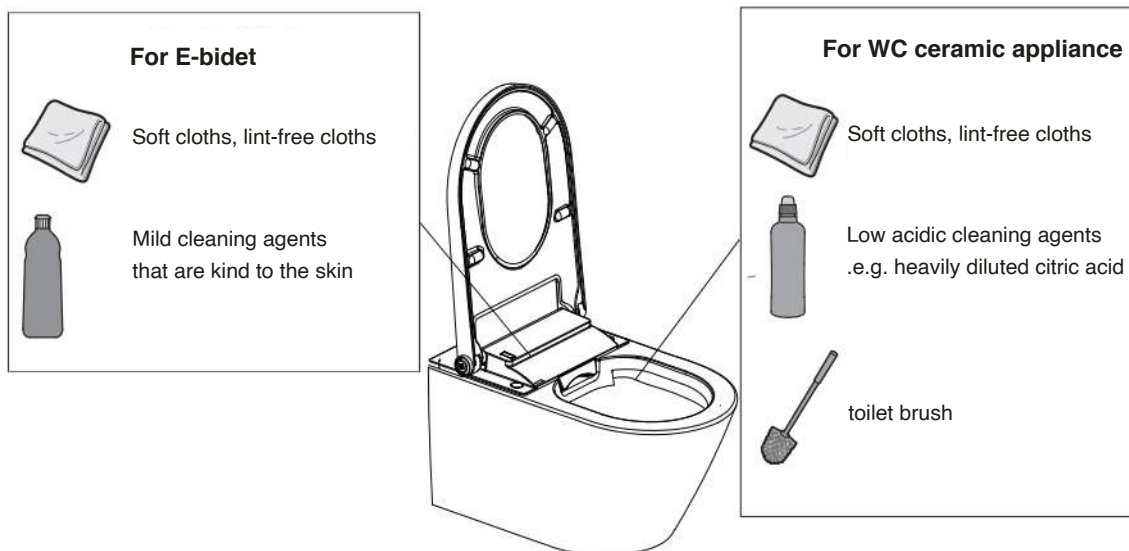

Do not use the cleaning agents of strong acid and alkali to clean the E-bidet.  
Do not use the hard brush .e.g. toilet brush nylon brush to clean the WC ceramic appliance.  
Do not use the metal brush.

## Self-Cleaning of the Tank



If the device has not been used for more than 72 hours, the next time the wash is activated, the self-cleaning of the tank will automatically begin for approximately 3 minutes. During self-cleaning, all buttons will be inactive. After the self-cleaning is complete, the device will return to normal mode.

---


---

## Nozzle Cleaning

The nozzle automatically cleans itself before and after washing.


The procedure for manual cleaning is as follows:

Lift the lid and seat, then turn the control knob clockwise. The nozzle will extend, and a clean water rinse will begin. After 5 minutes, it will automatically retract, or you can retract it earlier by pressing the "Stop" button.

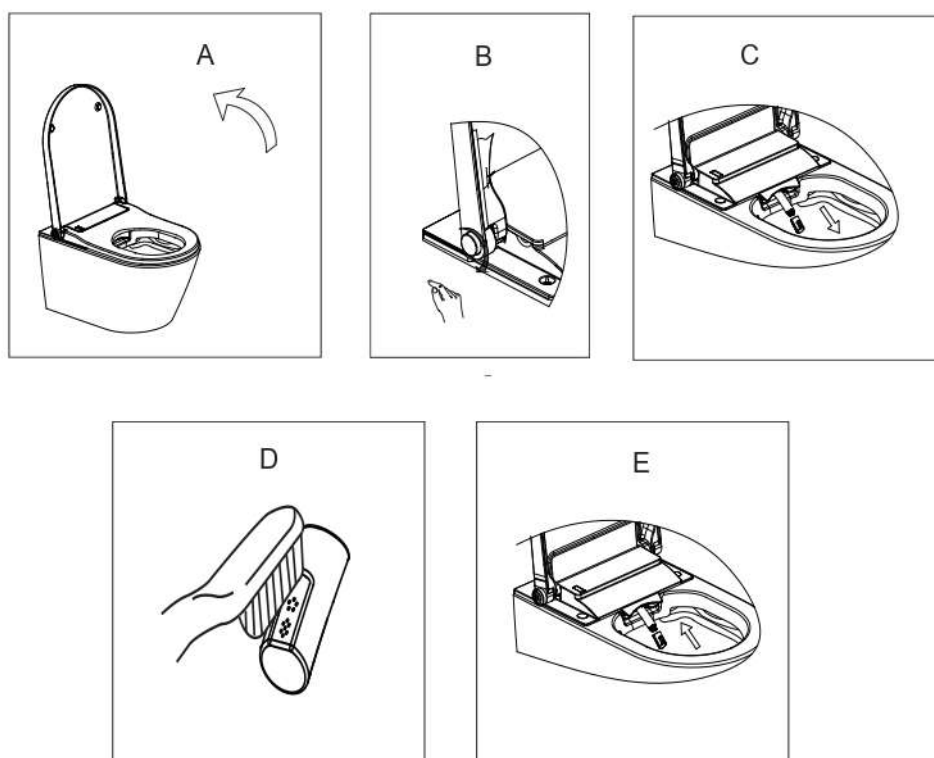

## Filter Replacement

The filter's lifespan is approximately six months, depending on the water quality at the installation site. The filter needs to be replaced if the water flow during washing becomes too weak.


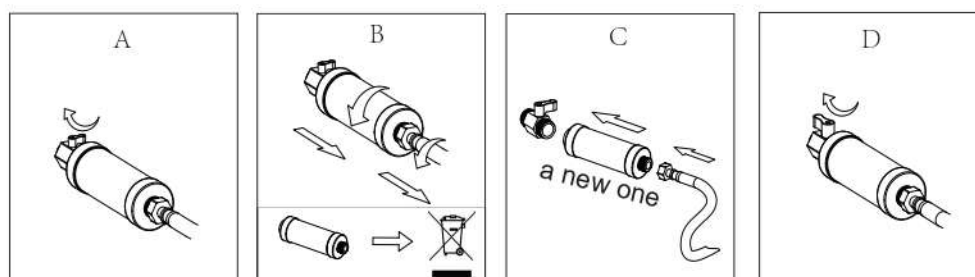


---

## Water Tank Draining



1. Before disassembling the electronic bidet, the water supply must be turned off and the power disconnected.
2. Do not rotate or tilt the device until the water tank is completely drained.

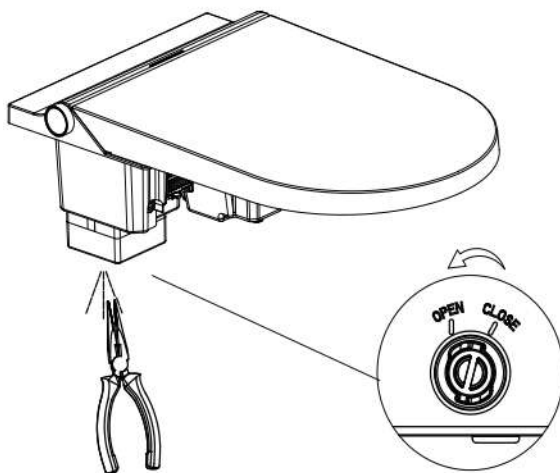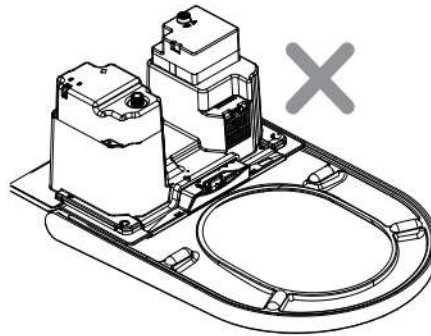

1. Grasp the drain plug with pliers, turn it to the "open" position, and pull it out. Water drainage will begin.


2. After draining is complete, push the plug back and turn it to the "close" position.

# One-On-One setting

---

If you are installing multiple electronic bidets in the same area and want each remote control to control only the assigned bidet, follow these steps:

1. Lift the lid and seat, and do not sit down. Set the night light to the off mode (see the "Lighting Setting" section).
2. Press the "Stop" and "Adjust Temperature" buttons on the remote control simultaneously and hold them for a few seconds. You will hear a beep from the device, and the "-" and "+" buttons will light up.
3. Release the "Stop" button, but continue to hold the "Adjust Temperature" button.
4. Press the "User 1" and "User 2" buttons in sequence, then release the "Adjust Temperature" button. At this point, the lit indicator light shows the current device ID code.
5. Use the "-" and "+" buttons to switch between different device ID codes, with the corresponding light turning on. A total of 32 ID codes are available. The default is the first code, and the light will be on by the "-" button.
6. After selecting the device ID code, press the control knob on the bidet and then press the "Stop" button on the remote control. After hearing the confirmation beep, the setting is complete.

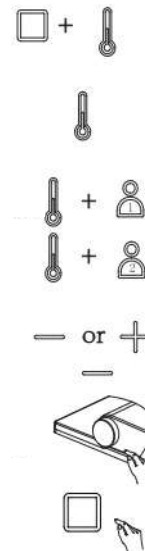

# Replace the batteries

---


The remote control requires 2 batteries (type 1,5 V LR3/AAA).

When the user lights flash continuously, please replace the batteries in time.



## NOTICE

1. Non-rechargeable batteries are not to be recharged.
2. Before charging, the rechargeable batteries must be removed from the device.
3. Do not use different types of batteries together, nor mix new and used batteries.
4. Insert the batteries according to the correct polarity.
5. Exhausted batteries must be removed from the device and disposed of safely.
6. If the device will not be used for an extended period, remove the batteries from it.
7. The power contacts must not be shorted.

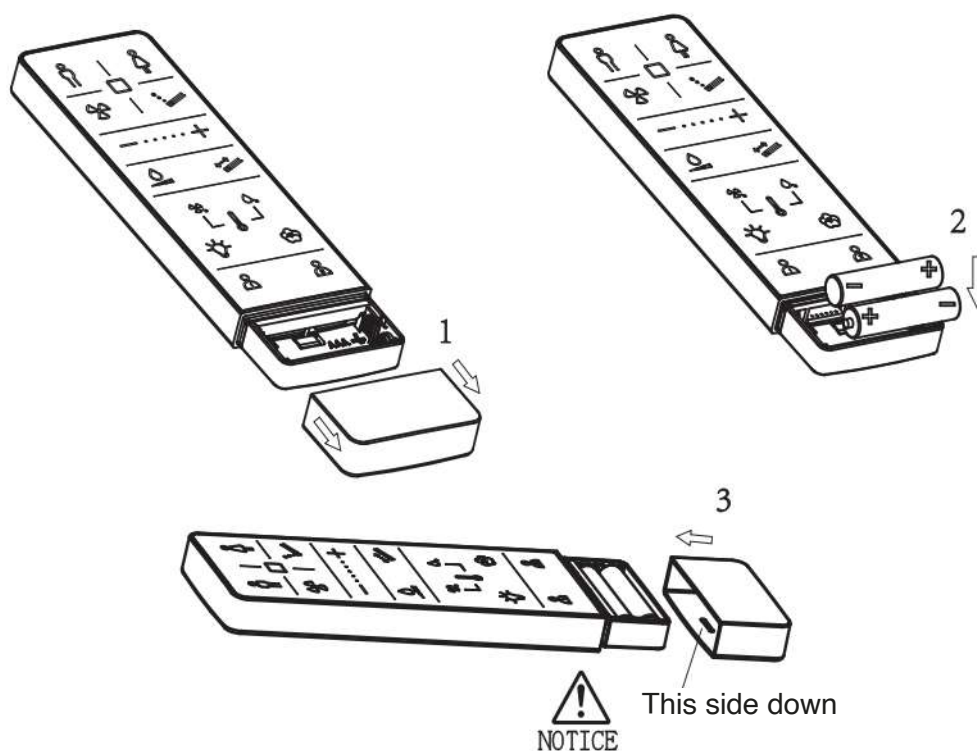



# Troubleshooting

Problem	Potential cause	Suggested action
The washing can not work	The power supply may not be opened	Please turn on the power
	The water supply may not be opened	Please open the inlet water valve, or check if there is a water outage
	The filter may be blocked	Please replace a new filter. It has a service life of approx half a year
	Maybe not in the seating state	Please sit on the seat and adjust sitting position
	Maybe the cover is closed	Please open the cover and sit on the seat
	Maybe it is not used for more than 72 hours	Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning.
The nozzle goes back suddenly	The washing cycle is 3mins. The nozzle will stop spraying after 3mins, and then go back	This is normal and please re-press the „wash“ button to start washing again
	There may be some problems of water supply	Please check if there is a water outage
	Maybe the seated sensor detects the user left the seat	Please adjust sitting position
	Maybe the cover is closing	Do not put down the cover when it is washing
Low water flow rate	The water flow rate may be set at low grades	Please increase the flow rate as per „adjusting water flow rate“ of operating instructions
	The water supply pressure may be too low	Please check and ensure the water supply pressure is $\geq 0,07$ MPa
	The filter may be blocked	Please replace a new filter. It has a service life of approx. half a year
	The nozzle may be blocked	Please replace a new nozzle
Low water temperature	The water temperature may be set at low grades	Please set the water temperature at high grade as per „adjusting temperature“ of operating instructions
	Maybe the temperature of water supply is too low	Please set the water temperature at high grade as per „adjusting temperature“ of operating instructions, or decrease the flow rate as per „adjusting water flow rate“ of operating instructions
The nozzle comes out slowly	When start washing function, the nozzle will be self-cleaning before coming out, and this will take some	This is normal
The water flows out but the nozzle do not come out	When start washing function, the nozzle will be self-cleaning before coming out. When the washing is over, also have this feature	This is normal
	Maybe it is not used for more than 72 hours	This is normal. Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes
The dryer can not work	The power supply may not be opened	Please turn on the power
	Maybe not in the seating state	Please sit on the seat and adjust sitting position
	Maybe the cover is closed	Please open the cover and sit on the seat
	Maybe it is not used dor more than 72 hours	Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
Low air temperature	The air temperature may be set at low grades	Please set the air temperature at high grade as per „adjusting temperature“ of operating instructions
	The air heater can not work normally	Please contact local distributor
Night light is always off	Maybe in the bright environment	When the night light is set at smart mode, the night light will not work when in the bright environment
	The night light function may be closed	Please open the night light function and adjust the night light mode as per „light setting“ of operating instructions
Night light is always on	Maybe in the dark environment	When the night light is set at smart mode, the night light will be always on when in the dark environment
	Something may be covered around the knob	Recover the obstructions around the knob
	The night light may be set at always on mode	Please adjust the night light mode as per „light setting“ of operating instructions
The nozzle goes back automatically when manual cleaning	The nozzle goes back after washing 5 minutes	This is normal
	Maybe press the „stop“ botton	The manual cleaning will be stopped if press the knob or press the „stop“ button on the remote control
	Maybe the seated sensor detects that the seat is closing	Please do not put down the seat during the manual cleaning
The remote control is not functioning	Maybe there are not batteries in the remote control	Please install the correct batteries in the remote control
	Maybe the battery power is too low	When the battery power is too low the LED of grade will flash. Please replace the battery
	Maybe the code of the bidet and remote control is not the same	Please set the code of the remote control to the correct one. See „One-On-One setting“
There are BEEP sounds when the bidet is working	There is a short BEEP when you are sitting down, and a long BEEP when you leave. Also there is a short BEEP when the bidet has received commands	This is normal. You can turn off the sound. See „sound setting“
The bidet can not work normally	Maybe there is something abnormal	Please shut off the power and turn on after one minute. If the bidet still cannot work, please contact local distributor
The light around the knob flash twice with constantly BEEP	The water supply temperature may be too high	Please shut off the power and water supply, stop using the product, and then contact local distributor
The light around the knob keep flashing	There may be something wrong with the product	Please check if the electric power and water supply are normal, cut off the power and restart the product. If the bidet still cannot work, please contact local distributor



## NOTICE

If you are installing multiple electronic bidets in the same area and want each remote control to control only its designated bidet, follow these steps.

Do not dispose of electrical devices in mixed municipal waste – use collection points for separate collection. For information on available collection systems, contact your local authority.

When electrical devices are disposed of in landfills, hazardous substances may leak into groundwater and the food chain, which can threaten health and the environment.

When replacing old equipment with new, the seller is legally required to take back the old device for environmentally friendly disposal free of charge.



---

# cerano

MF-Traders stavby s.r.o.  
U Stadionu 1881/10  
792 01 Bruntál  
Česká republika  
Moravskoslezský kraj, okres Bruntál

+420 227 272 800  
Info@cerano.cz