


Installation Manual – Concealed Shower Set

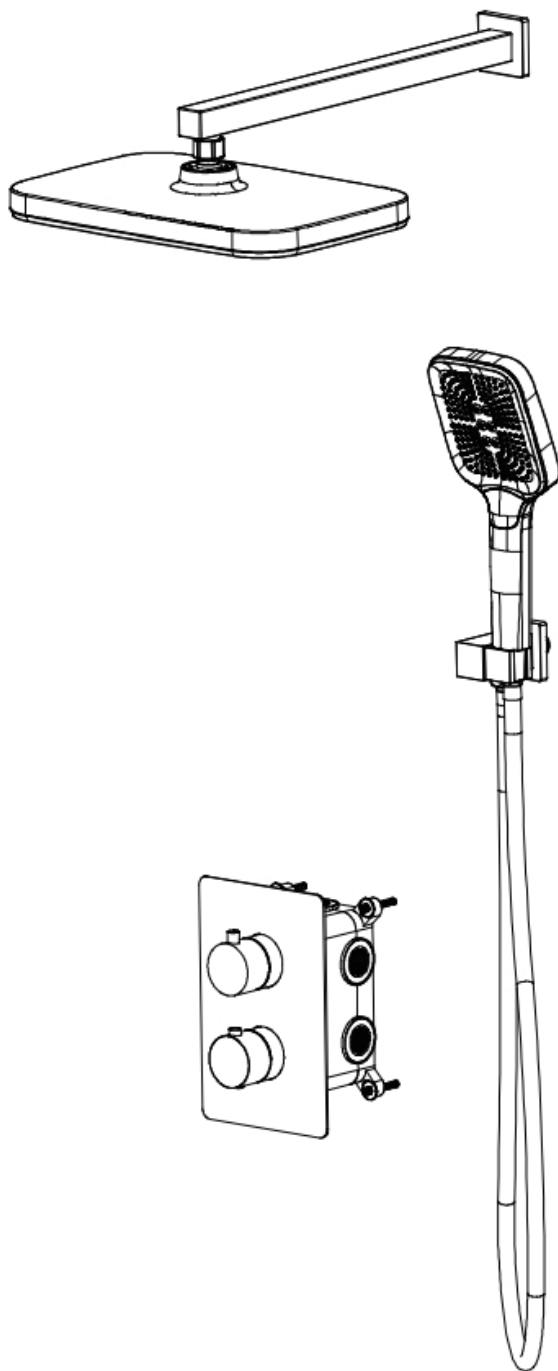

cerano

Instructions for Use and Maintenance

Diverter for Rain and Hand Shower


Turn the diverter to the rain shower symbol to activate the rain shower mode.

Turn the diverter to the hand shower symbol to activate the hand shower mode.

Temperature Control

The symbol “H” indicates hot water, and the symbol “C” indicates cold water.

You can easily adjust the temperature by turning the control handle toward H or C.

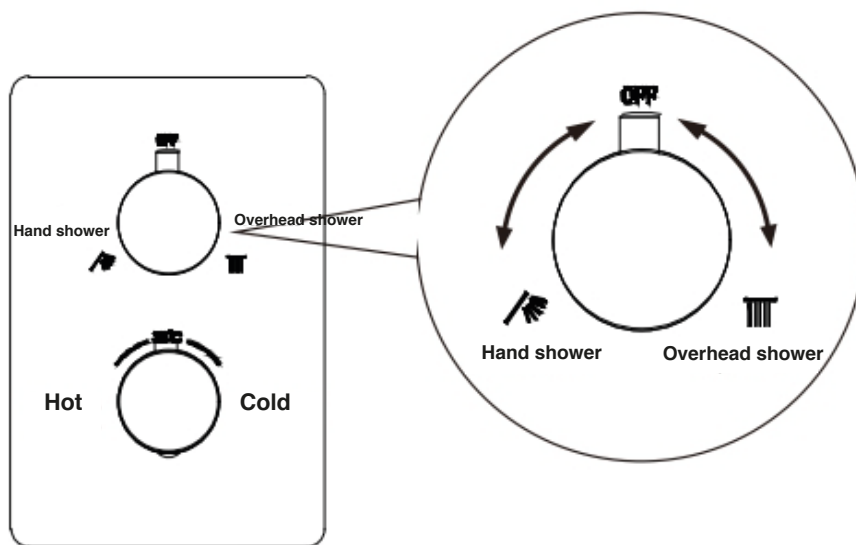

To keep your shower set looking perfect, we recommend cleaning it regularly.

When cleaning the faucet, follow these steps:

Wipe away dirt with a soft cloth and clean water.

To remove more stubborn dirt, you can use one of the following cleaning agents:

- a mild liquid cleaner
- a colorless cleaner

After cleaning, rinse off all residues of the cleaning agent thoroughly and dry the faucet with a soft cotton cloth.


Avoid using polishing or abrasive powders that contain coarse particles.

Do not use acidic cleaning products.

Installation of the Hand Shower Head

Step 1

Wrap the thread with Teflon tape, then screw it directly into the water pipe in the wall.

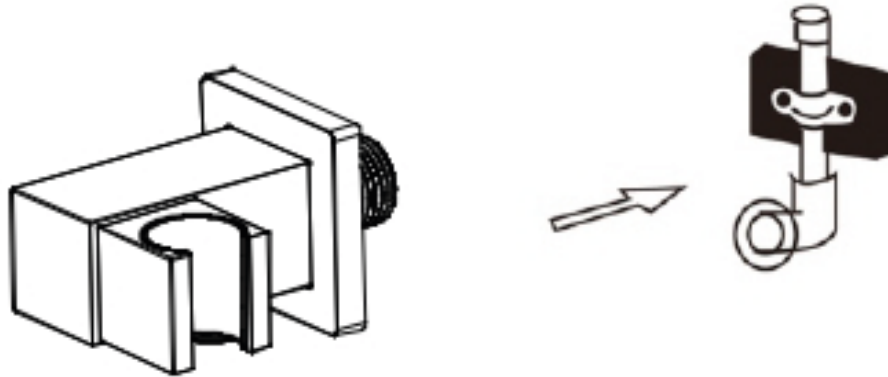

Step 2

Connect the hand shower to the holder using the shower hose. Make sure that rubber gaskets are inserted into the hose ends to prevent water leakage.




Before Installation

Please read this installation manual carefully before starting the installation and keep it for future reference. This manual contains installation and usage instructions.

Technical Specifications

1. The proper water pressure should be between 0.1–1.0 MPa. If the water pressure exceeds 1.0 MPa, a pressure-reducing valve must be used.
2. Before installation, clean any dirt or sediment from the pipes to prevent water leakage or system blockage.
3. This shower system is designed for wall installation. Before mounting, please carefully read this manual, check the dimensions of each component, and choose the correct position on the wall.
4. The inlet and outlet pipes must be wrapped with Teflon tape. Wrap the pipe threads several times clockwise. (This step is very important — the tape must be wrapped clockwise, otherwise water leakage may occur.)
5. Before starting the installation, shut off the water supply.


Required Installation Tools

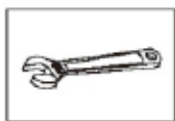

Adjustable wrench



Allen key
(included in the package)

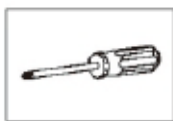


Phillips screwdriver



Teflon tape



Glue

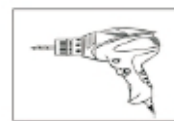



Electric drill

Accessory Check



Carefully check that all components are included in the package. If any part is missing, contact your dealer immediately.

Installation of the Overhead Shower


For wall-mounted showers

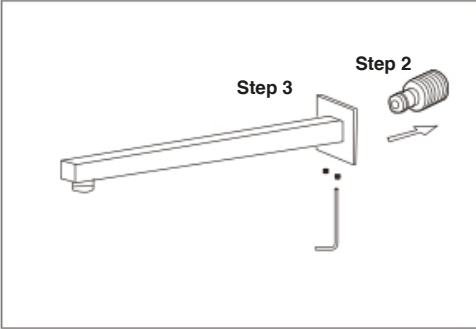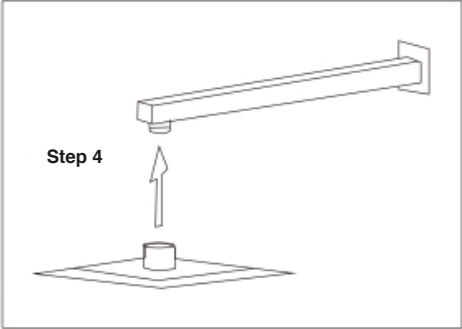 <p>Step 1 Screw the thread into the water pipe in the wall.</p> <p>Step 2 Screw the main shower body onto the prepared thread.</p> <p>Step 3 Tighten and secure using the Allen key.</p>	 <p>Step 4 Connect the overhead shower to the shower arm.</p>
---	--


For ceiling-mounted shower

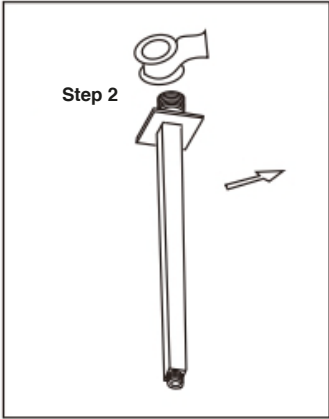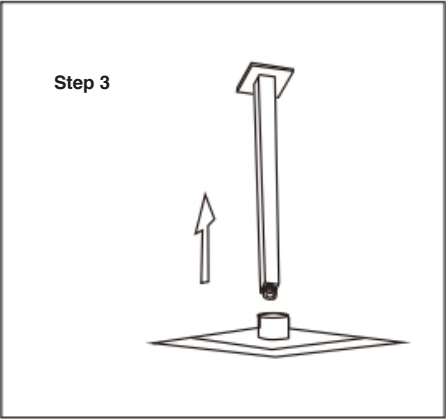 <p>Step 1 Wrap the thread with Teflon tape.</p> <p>Step 2 Connect the ceiling arm to the pipe by turning it clockwise.</p>	 <p>Step 3 Connect the overhead shower to the shower arm.</p>
--	--


Installation of the Control Panel

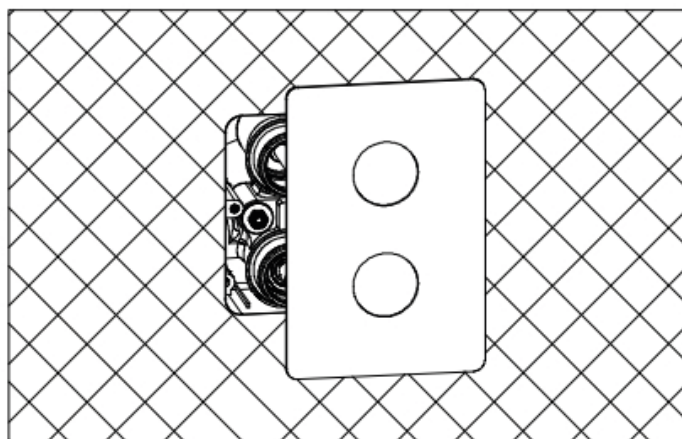

Step 1

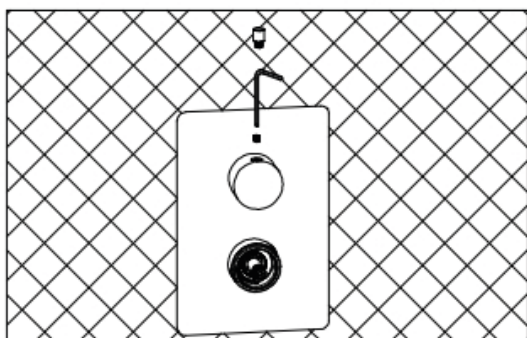

Step 2

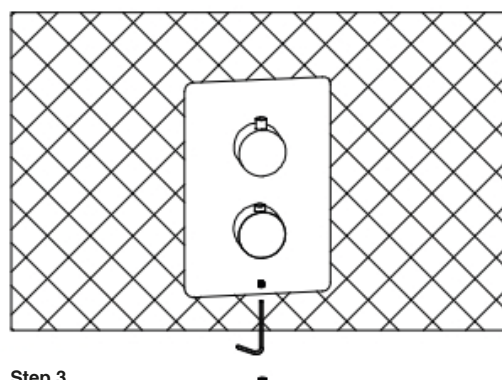

Step 3

Step 1
Attach the cover panel.


Step 2
Connect the mixer control knob using the Allen screw and cover it with the small cap.

Step 3
Attach the control lever using the Allen screw and cover it with the small cap.


Installation of the Concealed Body

Installation of the Concealed Body (Mixer Valve)

Make sure that the mixer valve is correctly connected to the hot and cold water supply — that is, the inlets are connected to the corresponding sides (hot water on the left, cold water on the right).

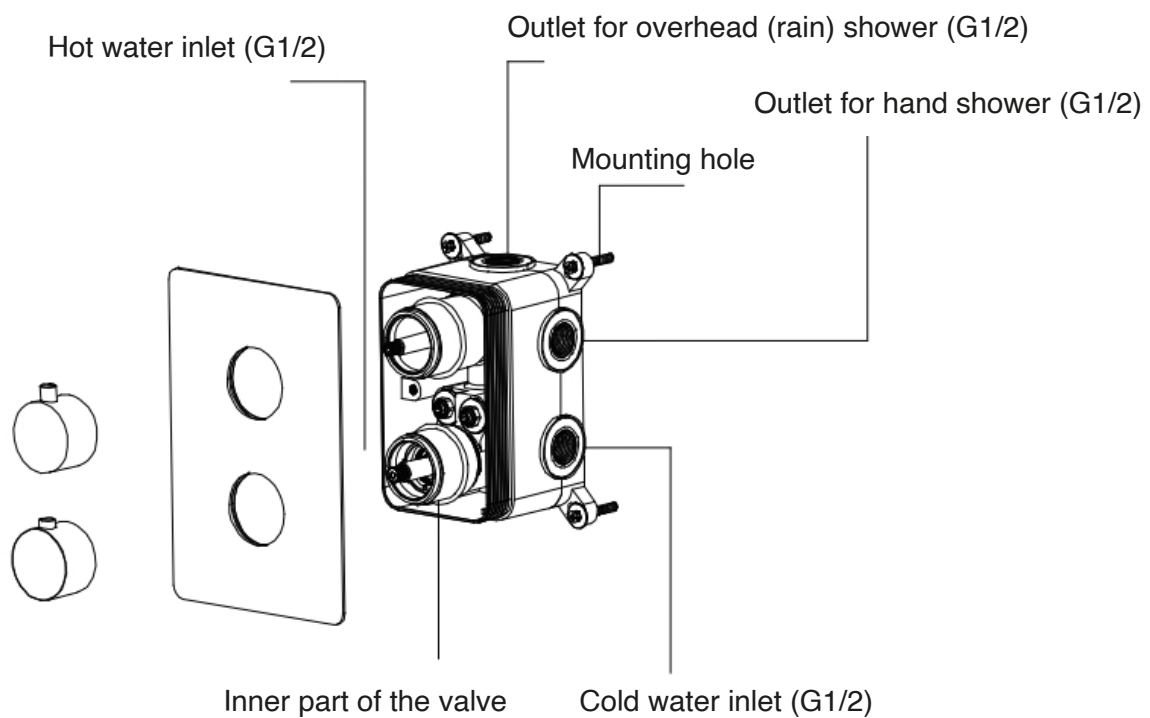


Installation steps

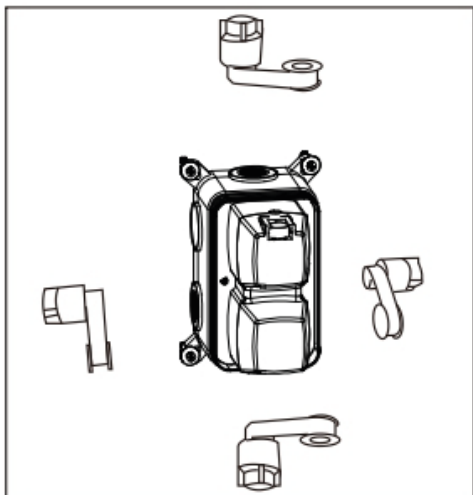


Step 1

The inlet and outlet pipes must be wrapped with Teflon tape. Wrap the pipe threads several times clockwise.

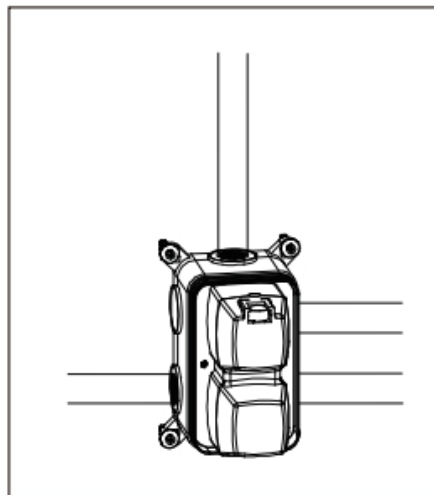


Step 2

Connect the water pipes to the concealed body.

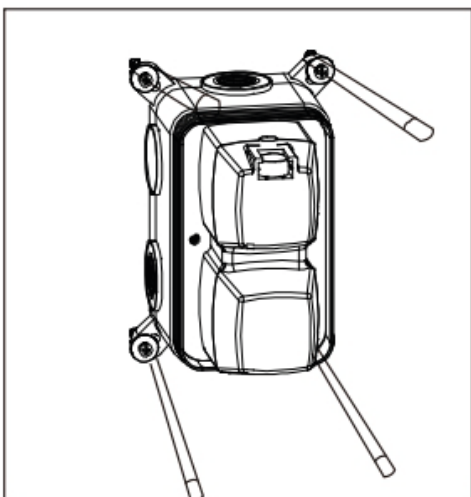


Step 3

Determine the exact position of the concealed body and the piping, then mark it.

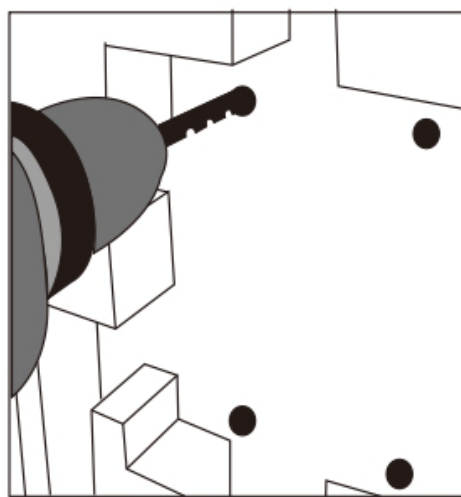


Step 4


After determining the position, create grooves for the pipe installation. Then remove the concealed body and drill the hole. Finally, use an electric drill to fasten the white screws into the wall.

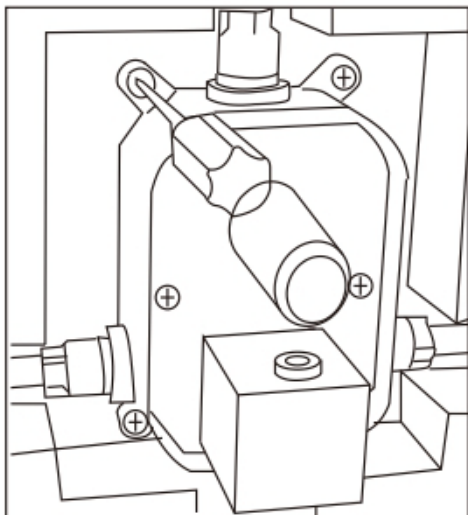


Step 5
Secure the concealed body to the wall using four screws.

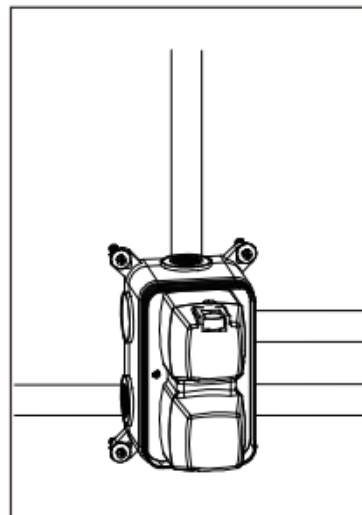

Step 6
Remove the cover of the concealed body from the mixer valve. Using the control lever, perform a pressure test on all inlet and outlet pipes to ensure there are no water leaks anywhere.

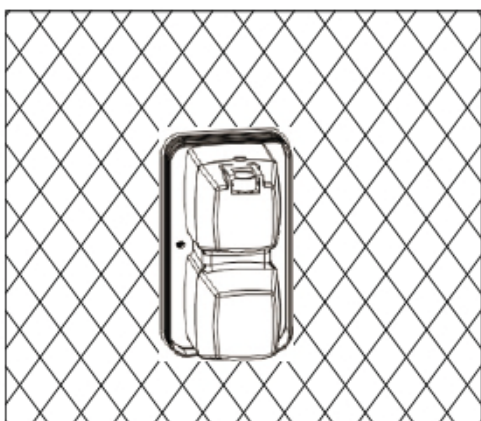

Step 7
The protective cover of the concealed body serves as protection against dust. Place it back onto the body and keep it on until the wall is tiled.

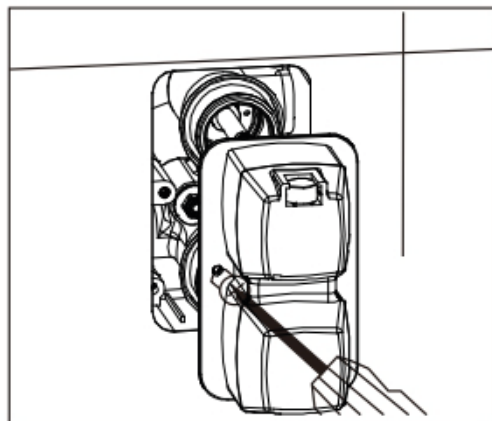

Step 8
After the wall has been tiled, remove the protective cover from the concealed body.



MF-Traders stavby s.r.o.
U Stadionu 1881/10
792 01 Bruntál
Česká republika
Moravskoslezský kraj, okres Bruntál

+420 227 272 800
Info@cerano.cz